


Quick Installation Guide

English, French

Accessories:

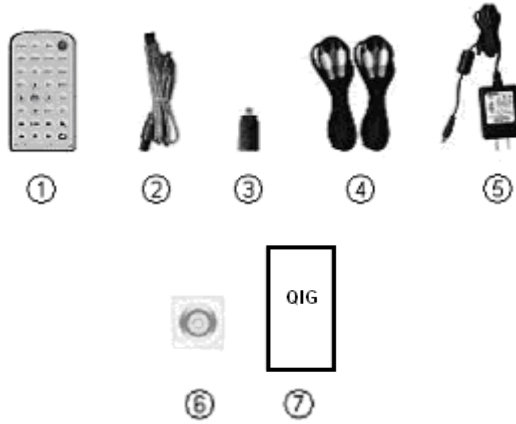

1. Remote Control (with battery)
2. USB Cable
3. USB-OTG Adapter
4. AV Cable (two pieces)
5. AC Adapter
6. Manual Disc
7. Quick Installation Guide


Notice: If your TV does not have AV/ RCA jack, you will have to prepare a SCART cable to connect RECORDER to your TV.



Installations:


Notice: Please refer to the manual in the disc for more detailed information.

Application1- Playback: Please connect RECORDER to TV as illustration shown below.

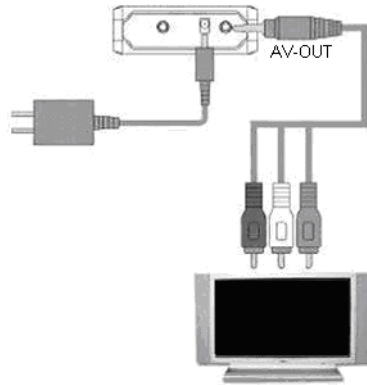

Notice:
Three terminals (with three different color) of the AV cable should be matched to the corresponding input jack on you TV.

Application2- Recording DV/DVD: Please connect RECORDER to TV and other video output equipment, such as DV/DVD, as illustration shown below.

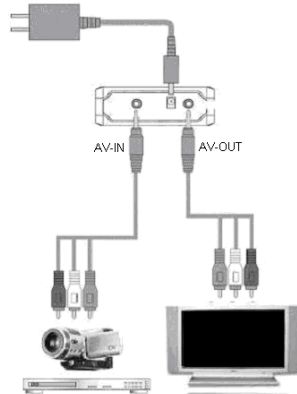


Application3- Recording TV programs directly: Please connect the RECORDER to TV as illustration shown below.

Notice :


Connect the AV-OUT of the TV (source program channel) to the AV-IN of the RECORDER, and connect the AV-OUT of the RECORDER to the AV-IN of TV.

Please make sure to turn your TV to the program channel you want to record first, then press the REC key on the keypad (or remote control), the RECORDER will start to record the program.

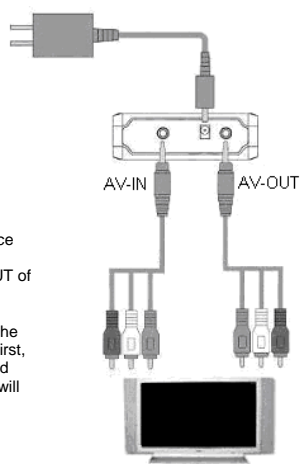

Guide d'Installation Rapide

Accessoires

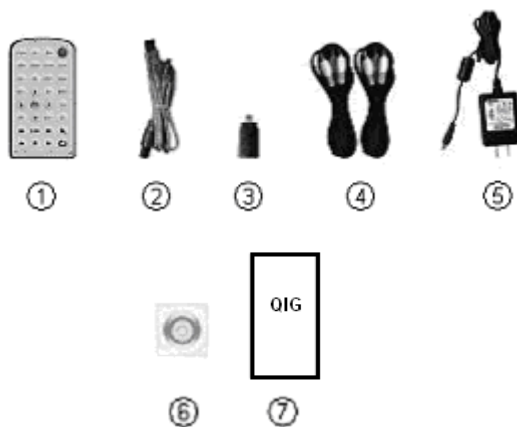


1. Télécommande (avec pile)
2. Câble USB
3. Adaptateur USB-OTG
4. Câble Audio Vidéo (Deux pièces)
5. Adaptateur Secteur
6. CD d'installation (Manuel Utilisateur)
7. Guide d'installation rapide

Pour information, si votre TV n'a pas de connecteur AV/RCA, vous aurez besoin d'un adaptateur Peritel pour brancher votre Recorder à la TV




Réglage

Première application : Lecture. Branchez le Recorder à la TV comme indiqué

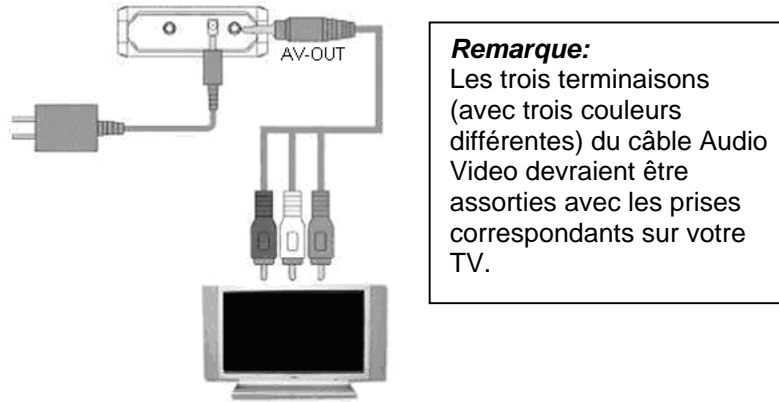

Application 2 : Enregistrez DV/DVD : Connectez le recorder à la TV ou autre source video, comme caméscope, DVD, comme indiqué

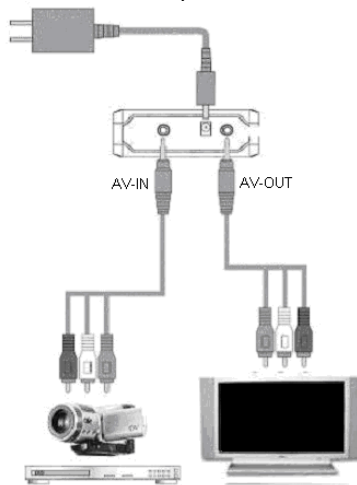


Application 3 : Enregistrez les programmes TV directement. Branchez le Recorder à la TV comme indiqué

Remarque:

Connectez la prise Audio Video Out (sortie) de votre téléviseur (la chaîne que vous souhaitez enregistrer doit être sélectionnée) à l'entrée AV-IN du Recorder, et connectez le AV-OUT (sortie) du Recorder à l'entrée AV-IN du téléviseur

Vérifiez que la chaîne que votre téléviseur est allumé, avec la chaîne que vous souhaitez enregistrer, puis appuyer sur le bouton REC (enregistrer) de la télécommande du Recorder. Le Recorder commencera à enregistrer le programme.

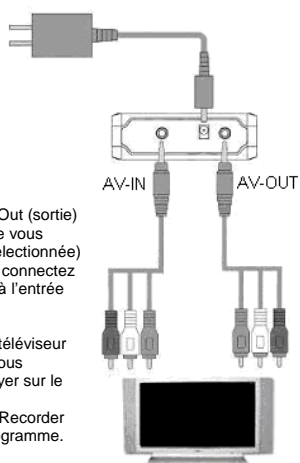

3100553652
Ver. 1.0
Mar. 2007

